
Installation instructions for flap control RX1:

- Audi S4 B9
- Audi RS4 B9
- Audi S5 B9
- Audi RS5 B9

Scope of delivery:

- Flap Control RX1
- 2 x remote transmitter
- Vehicle-specific wiring harness

Operation of the module via handheld transmitter:

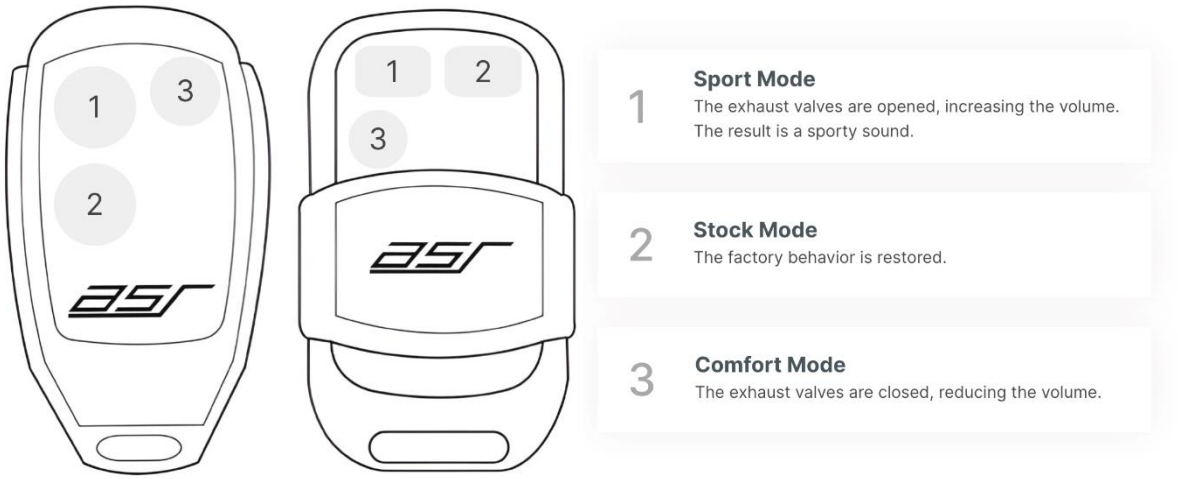

By briefly pressing the respective buttons, the flaps are controlled as follows:

Button 1: Permanently switches the flaps on 100%.

Button 2: The RX module will be deactivated. The flaps switch 100% series again, as if no module was installed.

Button 3: The flaps are 100% permanently closed.

General information:

The contents of these installation instructions are only a guide for the assembly of the products. Images and other content may vary from vehicle to vehicle. ASR Component GmbH assumes no liability for damage that occurs during installation, incorrect use or maintenance.

The exhaust flaps should be switched on and off regularly, even with the module installed, in order to avoid jamming (blocking) the flap mechanism. The exhaust flaps must not be closed continuously when driving at full load.

The products may only be installed by trained specialists. The shoring is carried out in a de-energized state. Disconnecting plug connections in the energized state cause error messages in the vehicle. Please note and follow the instructions on the following pages of the installation instructions. The products may only be connected to the places specified in the instructions. ASR Component GmbH reserves the right to change components without giving reasons.

Electrical appliances and batteries must not be disposed of in household waste. Please note our information on disposal, which you can view under the following link: https://asr-component.de/content/22-hinweise-elektrog-battg

The flap controls may not be used in the area of the StVO. These are intended exclusively for use in racing or export. Use in the area of the StVO is at your own risk.

The flap controls are subject to the statutory warranty regulations. In case of a defect or general questions, please contact us immediately. The warranty claim expires in the event of any unauthorized modifications to the product and its accessories.

The content, works and information provided in these installation instructions are subject to German copyright law. Any kind of duplication, processing and distribution requires the prior written consent of ASR Component GmbH.

IMPORTANT:

Preparations for assembly:

Park the vehicle. Turn off the engine and ignition. Open the driver's door or trunk based on the mounting position of your module. Leave the driver's door or trunk lid completely open and place the key at least 5 meters away.

Wait about 15 minutes for all center console lights to go out (vehicle 100% at rest). DO NOT open or close doors or the trunk during this time, and DO NOT turn on the ignition. Do not start assembling until the lights have gone out!


Error and Support Requests:

In order to be able to offer you support, it is imperative that you take pictures of all work steps.

Assembly



- Open the trunk and remove the left side panel, unscrew it.
- To do this, you will find a black screw that can be loosened by hand

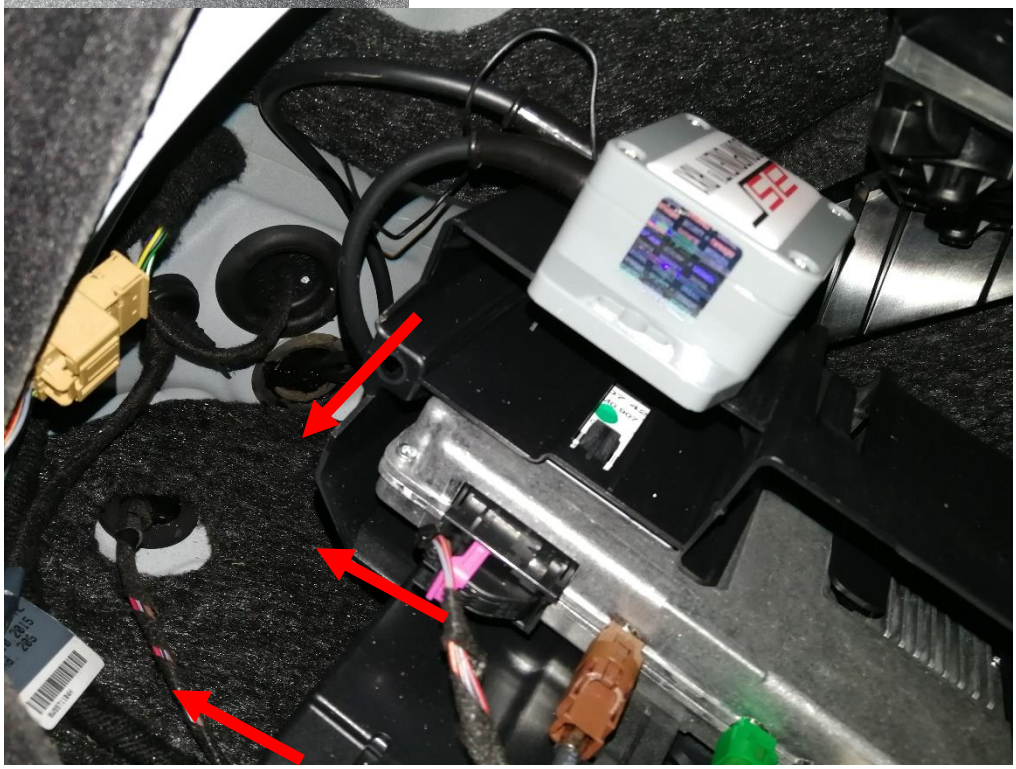

- Behind the cover, there are several options for cable entry to the outside
- Push the selected bushing out to the outside and insert both cables of the control through it.
- Insert the short cable into the left exhaust flap and fasten it with cable ties
- Lead the long cable through the rear apron to the other side and insert it there at the right exhaust flaps.
- Again, fasten all cables well.
- Cut the rubber plug and put it back in. If necessary, seal the duct separately.
- Attach the module with adhesive tape (back) or cable ties.