SYSTEM NO.	**SSXBM1275**

VEHICLES	YEARS
BMW 2 SERIES M240I COUPÉ (G42 XDRIVE OPF/GPF MODELS ONLY)	2022 AND LATER
BMW 2 SERIES M240I COUPÉ (G42 XDRIVE - NAS NON OPF/GPF MODELS ONLY)	2022 AND LATER
BMW 3 SERIES G20 & G21 M340I XDRIVE SALOON & TOURING MODELS (OPF/GPF MODELS ONLY)	2019 AND LATER
BMW 3 SERIES G20 M340I SEDAN INC XDRIVE (NORTH AMERICAN / ROW MODELS ONLY)	2021 AND LATER
BMW 4 SERIES G22 M440I COUPE (OPF/GPF EQUIPPED MODELS ONLY)	2020 AND LATER
BMW 4 SERIES G22 M440I COUPE (NAS/ROW VEHICLES ONLY)	2021 AND LATER
TOYOTA SUPRA A90 2.0 TURBO B48 (UK/EURO SPEC VEHICLES)	2021 AND LATER
TOYOTA SUPRA A90 COUPE 3.0 TURBO (UK/EUROPEAN WITH OPF/GPF) - BOTH AUTO & MANUAL MODELS	2019 AND LATER
TOYOTA SUPRA A90 COUPE 3.0 TURBO (USA/ROW WITHOUT OPF/GPF) - BOTH AUTO & MANUAL MODELS	2019 AND LATER
TOYOTA YARIS GEN 2 - GR 1.6T (OPF/GPF MODELS ONLY)	2024 AND LATER

NOTES	Insert

TECHNICAL INFORMATION

NOTES	Insert

1. Open the trunk.
2. Remove the trunk floor.
3. Remove the trim panel at the trunk latch.
4. Remove the right (passenger) side trim panel.
5. Remove the foam padding and tire repair kit.

6. Use the cable grommet underneath.

7. Route the cable to the outside of the trunk lid.

8. Connect the wiring neatly.




MILLTEK









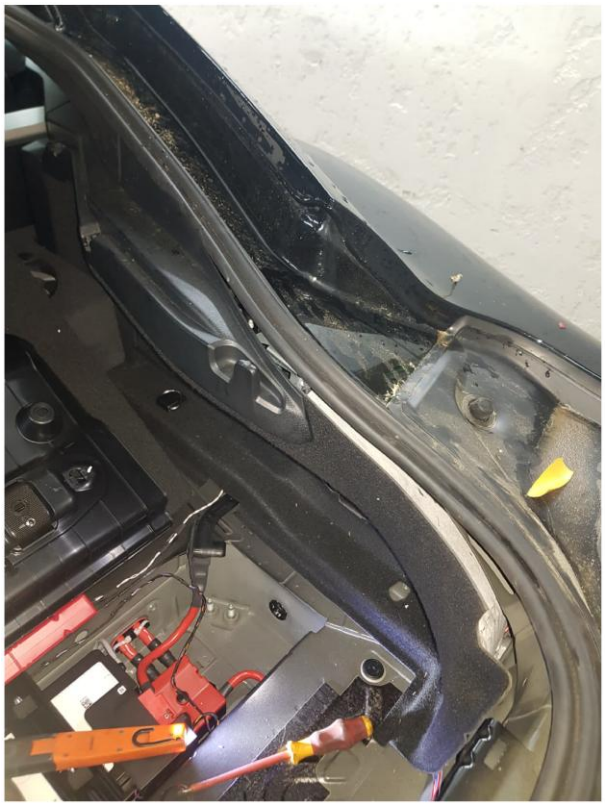










1
30
40
15
10
30