SYSTEM NO.	**SSXVW657**

VEHICLES	YEARS
VOLKSWAGEN ARTEON 2.0TSI 280PS 4MOTION (NON OPF/GPF VEHICLES ONLY)	2017 TO 2019
VOLKSWAGEN ARTEON 2.0TSI 280PS 4MOTION (NORTH AMERICAN OE VALVED SYSTEMS)	2019 TO 2021
VOLKSWAGEN ARTEON 2.0TSI 280PS 4MOTION (OPF/GPF VEHICLES ONLY)	2019 AND LATER
VOLKSWAGEN GOLF MK7 R 2.0 TSI 300PS (ECE APPROVED & 76.2MM SYSTEMS)	2014 TO 2016
VOLKSWAGEN GOLF MK7 R 2.0 TSI 300PS (80MM RACE SYSTEM OPTIONS)	2014 TO 2016
VOLKSWAGEN GOLF MK7.5 R 2.0 TSI 310PS (NON-GPF EQUIPPED MODELS ONLY) - 76MM & EC APPROVED SYSTEMS	2017 TO 2021
VOLKSWAGEN GOLF MK7.5 R 2.0 TSI 310PS (NON-GPF EQUIPPED MODELS ONLY) - 80MM RACE SYSTEMS	2017 TO 2021
VOLKSWAGEN GOLF MK7.5 R 2.0 TSI 300PS (GPF EQUIPPED MODELS ONLY) - 76MM & EC APPROVED SYSTEMS	2019 TO 2020
VOLKSWAGEN GOLF MK7.5 R 2.0 TSI 300PS (GPF EQUIPPED MODELS ONLY) - 80MM RACE SYSTEMS	2019 TO 2020
VOLKSWAGEN GOLF MK8 R 2.0 TSI 320PS (GPF EQUIPPED MODELS ONLY)	2021 TO 2024
VOLKSWAGEN GOLF MK8.5 R (333PS OPF/GPF EQUIPPED MODELS ONLY)	2024 AND LATER
VOLKSWAGEN GOLF MK8.5 R (333PS NON-GPF / NORTH AMERICAN MODELS ONLY)	2025 AND LATER
VOLKSWAGEN GOLF MK8 R 2.0 TSI 320PS (NON-GPF / NORTH AMERICAN MODELS ONLY)	2022 TO 2024

NOTES	Insert

TECHNICAL INFORMATION



NOTES	Insert

Functions:

1. Valve Open
2. Valve Closed
3. OE

These Installation instructions are a guide only, depending on year of build and car Equipment there might be slight differences to the pictures shown.

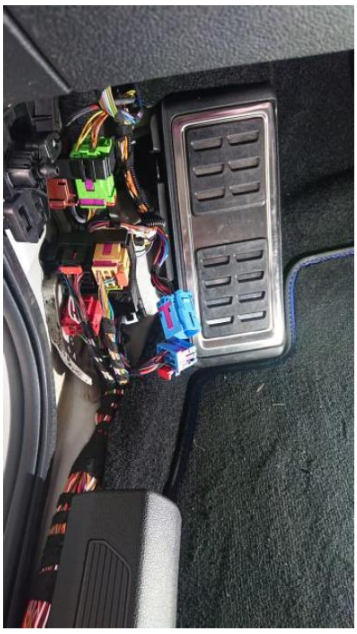
- Do not remove Plastic panels and covers using high force.
- We will not be reliable for damages to the vehicle in case of inappropriate Installation.
- The use of the Valve Control Module is not legal for Road use- The use will be at your own risk.

1. 
Remove Side cover for Dashboard, this is simply clipped and can easily be lifted.

2. 
Remove Bonnet Lock lever.
First you need to remove the Safety pin/clip. Best to do that with a small screwdriver pulling the clip towards the front of the car, when clip is removed you can pull the Lever out easily.
Remove the small cover and unscrew the screw behind.

3. 
A-Pillar cover needs to be removed (Clipped).

4. 
Door Sill needs to be removed, clipped.

5. 
Now you can remove the cover behind the Bonnet Lock lever.
Fit the Module between the Blue connectors.





6. Fit the Shoe for Ground to the OE Ground Stud, untightening the M6 Nut, fit the shoe and retighten the nut.
   Fix the Module with Cable Ties.

7. Re assembly in opposite way to disassembly.