SYSTEM NO.	**SSXFD413**

VEHICLES	YEARS
FORD FIESTA MK8 ST 1.5 ECOBOOST 200PS (PRE SEPT 2020 MODELS ONLY)	2018 TO 2020
FORD FIESTA MK8 & MK8.5 ST 1.5 ECOBOOST 200PS (POST SEPT 2020 MODELS ONLY)	2020 AND LATER
FORD PUMA ST 1.5 200PS ECOBOOST (OPF/GPF EQUIPPED)	2020 AND LATER
FORD PUMA ST 1.0 170PS (OPF/GPF EQUIPPED VEHICLES)	2023 AND LATER

NOTES	Insert

TECHNICAL INFORMATION



NOTES	Insert

Functions:

1. Valve Open
2. Valve Closed
3. OE

These Installation instructions are a guide only, depending on year of build and car Equipment there might be slight differences to the pictures shown.


- Do not remove Plastic panels and covers using high force.
- We will not be reliable for damages to the vehicle in case of inappropriate Installation.
- The use of the Valve Control Module is not legal for Road use- The use will be at your own risk.

1. 

Remove Boot bottom panel.
Remove panel around Boot Lock, clipped.
Remove Loading panel, clipped in 4 positions.

MILLTEK



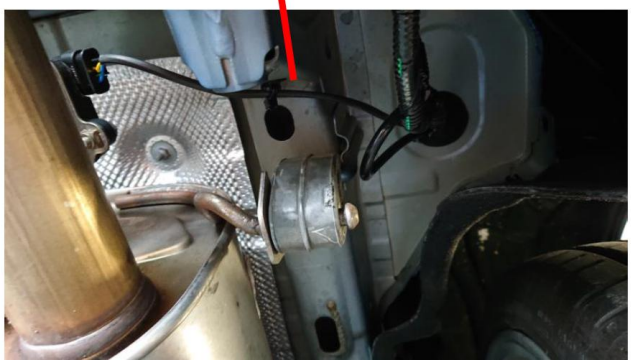

2. RH side Boot panel need to be slightly lifted, the cable boot (Red Arrow) needs to be pushed to the.

3. Feed Module cable through the opening to the outside and connect between the actuator and connector (pic.3) The OE Wiring connector fits to the Long Module connector, and the short connector connects to the Actuator.

4. Fit Wiring with Cable ties and ensure it will not be able to touch exhaust parts.

5. Pull all wiring back to the car inner, fit the Cable boot which will need a slight cut And fix module with double sided Tape on the inside.

6. Assembly in opposite order to disassembly.